

## PCI lpt port controller drivers

- Go to device manager
  - o Select PCI simple communications controller
  - o Right click and select update driver
  - o De-select find best driver and locate manually
- Browse CD
  - o Multi I/O
  - o 220N-2
  - o XP folder
  - o “Netmos 9815 PCI Multi I/O controller” loads
- 2 new devices will appear under LPT ports
  - o load each the same as above
  
- Netmos 9815 PCI Multi I/O controller should appear where PCI simple communications controller was earlier
  
- Netmos PCI ECP parallel port LPT(2) and (3) should also appear